
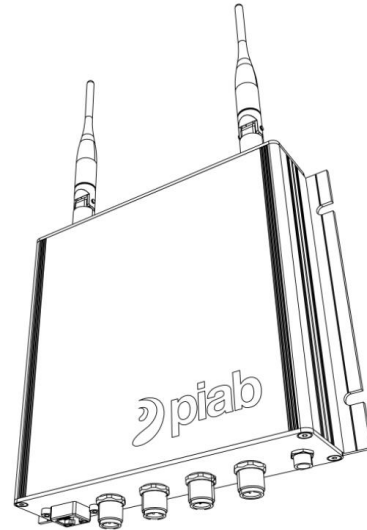


SIMCAN and SMART Platform

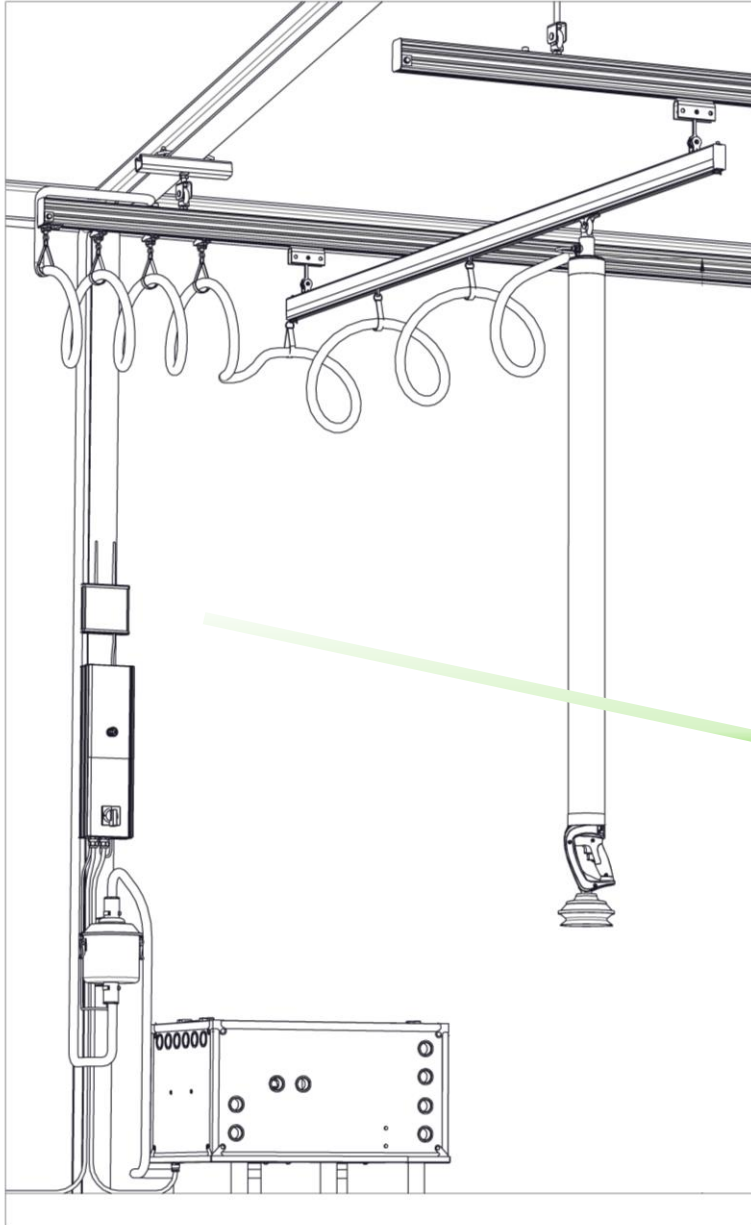

- SIMCAN gives the user and organisation the possibility to view statistics, real time view and diagnostics of the lifter by login in to our we based platform
- piLIFT® SMART will also automatically be updated with the latest software through SIMCAN.
- Ethernet is the recommended connection due to stability.
- When an account is created - the personal data provided will be stored. The data will not be sold or shared to any third part company for marketing purposes.
- Follow this guide for how to set up your SIMCAN account

Activation code

The activation code can only be used once

How to connect SIMCAN through Ethernet


The Ethernet connection needs to be open for internet at:

https (tcp port 443) - entire internet
AMQP(S) (tcp port 5671 and 5672)

No captive portals are allowed.

DHCP must be available on the network.

Insert ethernet cable

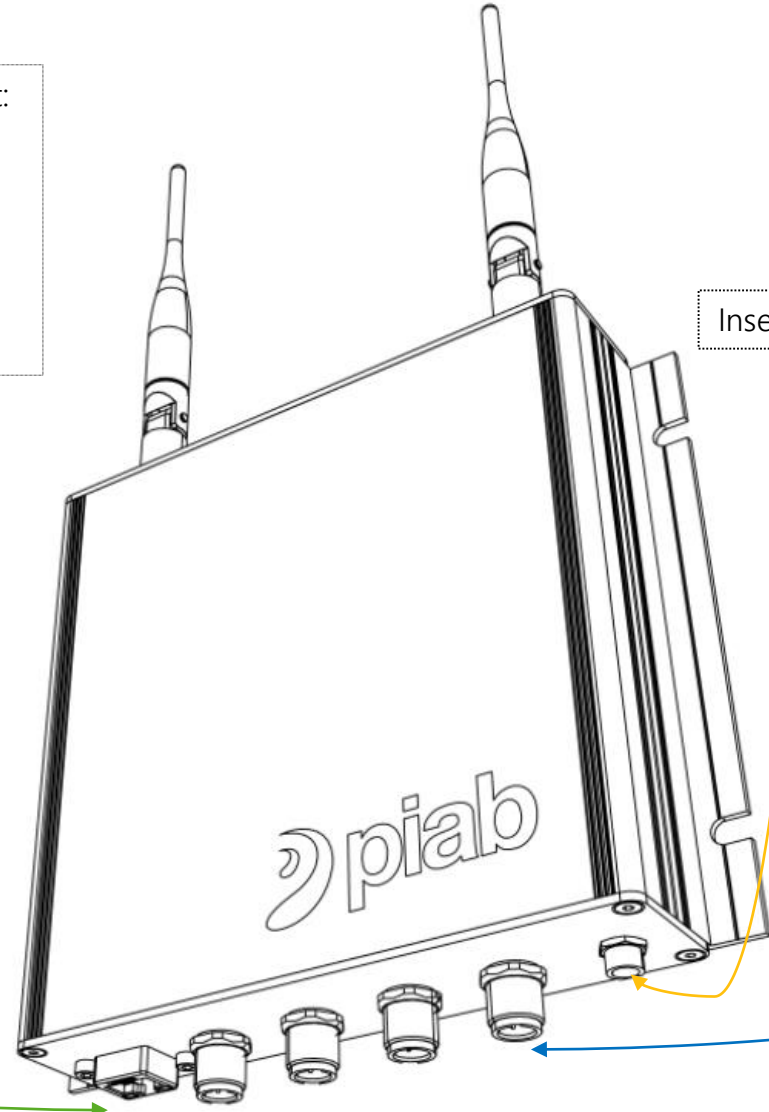


Insert the included power plug with 90 → 264V ac input

Insert one end of the supplied CAN Bus cable to the Gateway and one end to a choosable connection underneath the VFD.

Set up of account

Enter <https://pilift.piab.com> and click "Register new user"


1

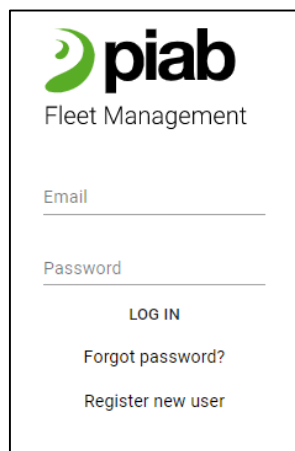

Enter your User data.
Please use a non-personal email address that you can access.


Click "register"

2

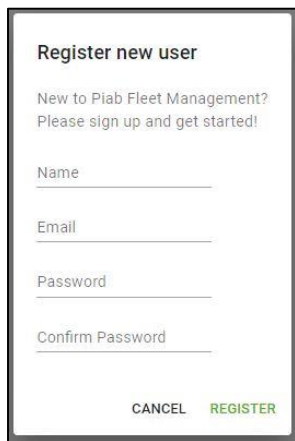

An verification email has been sent to the chose email. Check the chosen email and click on the verification button in the email

3

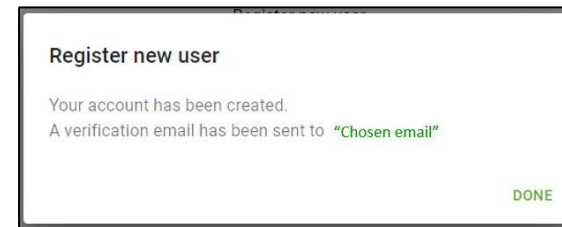

Your account is now created

4



Set up of account

5


Log in to your account and click on "Gateways"



7

Enter your Activation code that is shown at page 1.

Please notice that each activation code can only be used once

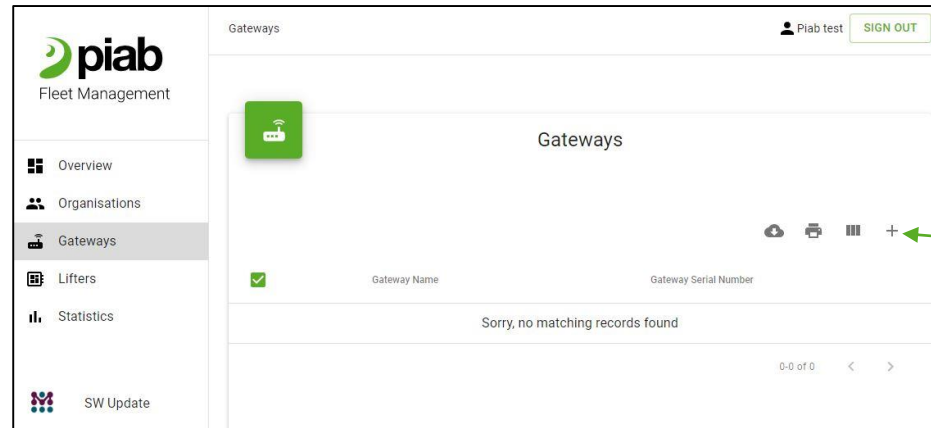

6

Click on the "plus" symbol

Set up of account

8

Create a new Organisation by adding your user data and then click "Finish"

Add gateway

2 Select Organisation

SELECT EXISTING **CREATE NEW**

Organisation Name*

Contact email*

Address 1*

Address 2

Country*

State*

City*

Zip Code*

BACK FINISH CANCEL ADD

9

Click "Add".
The SIMCAN is now activated

Add gateway

✓ Enter Activation Code

✓ Select Organisation

All steps completed, click Add to proceed.


START OVER

CANCEL ADD

Set up of account

10

Click on "Organisations" and then the "eye-symbol"

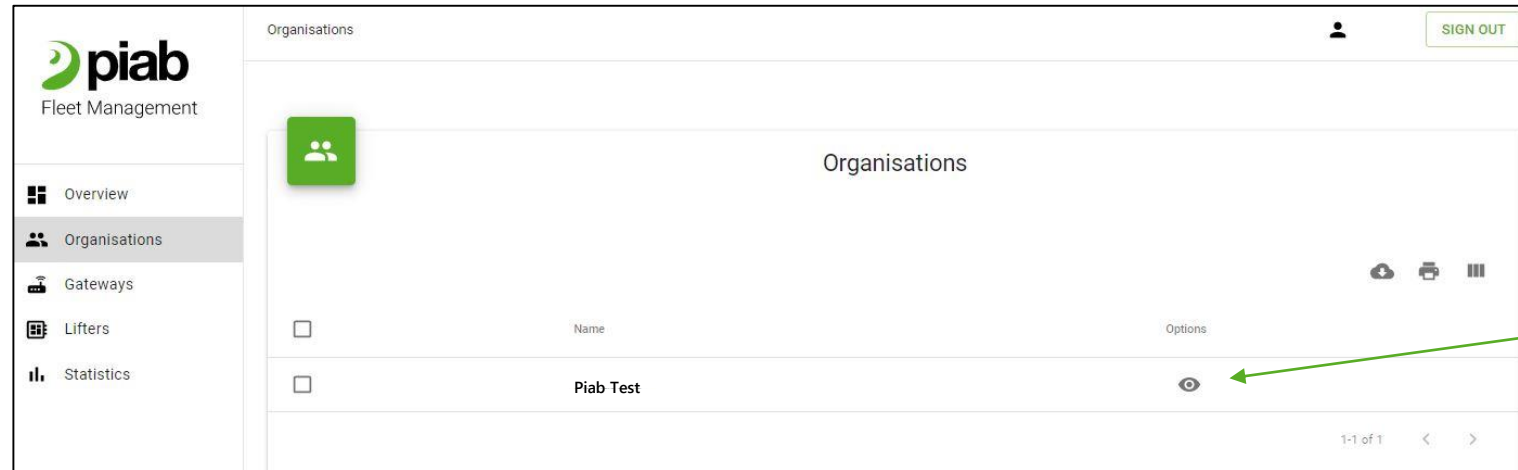

11




Click on the + symbol and add users

Enter the users email address

12

You can chose the users level of access

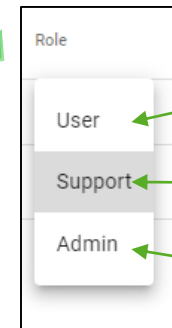

Possibility to view statistics and lift logs


Possibility to view statistics, lift logs, live data and diagnostics

Possibility to view statistics, lift logs, live data and diagnostics and administer account

How to use

1



Click on "Lifters" and view all of your lifters.

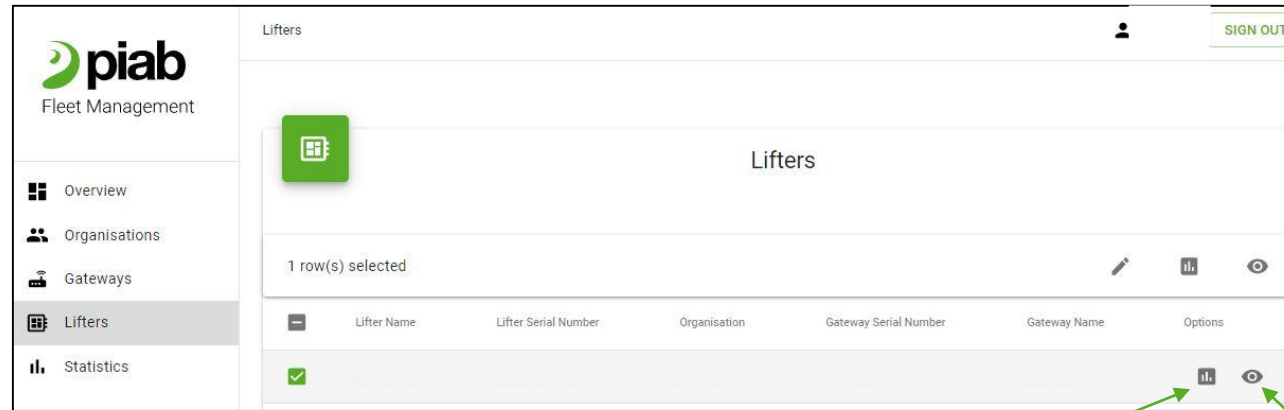

Click on "statistics" to view statistics, real time view and lift logs

2

Click on "diagnostics" to see diagnostics of the lift unit

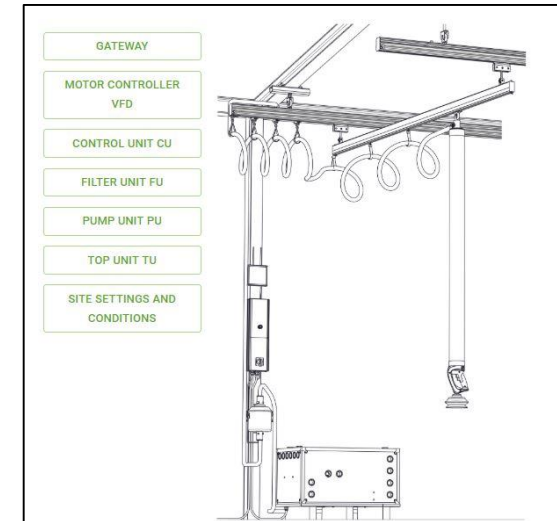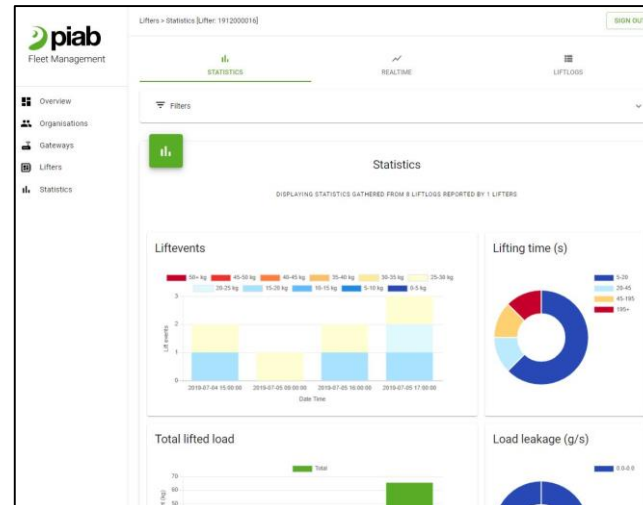

Smart solutions for the automated world™

